


IsEasy

INDUCTION HOB

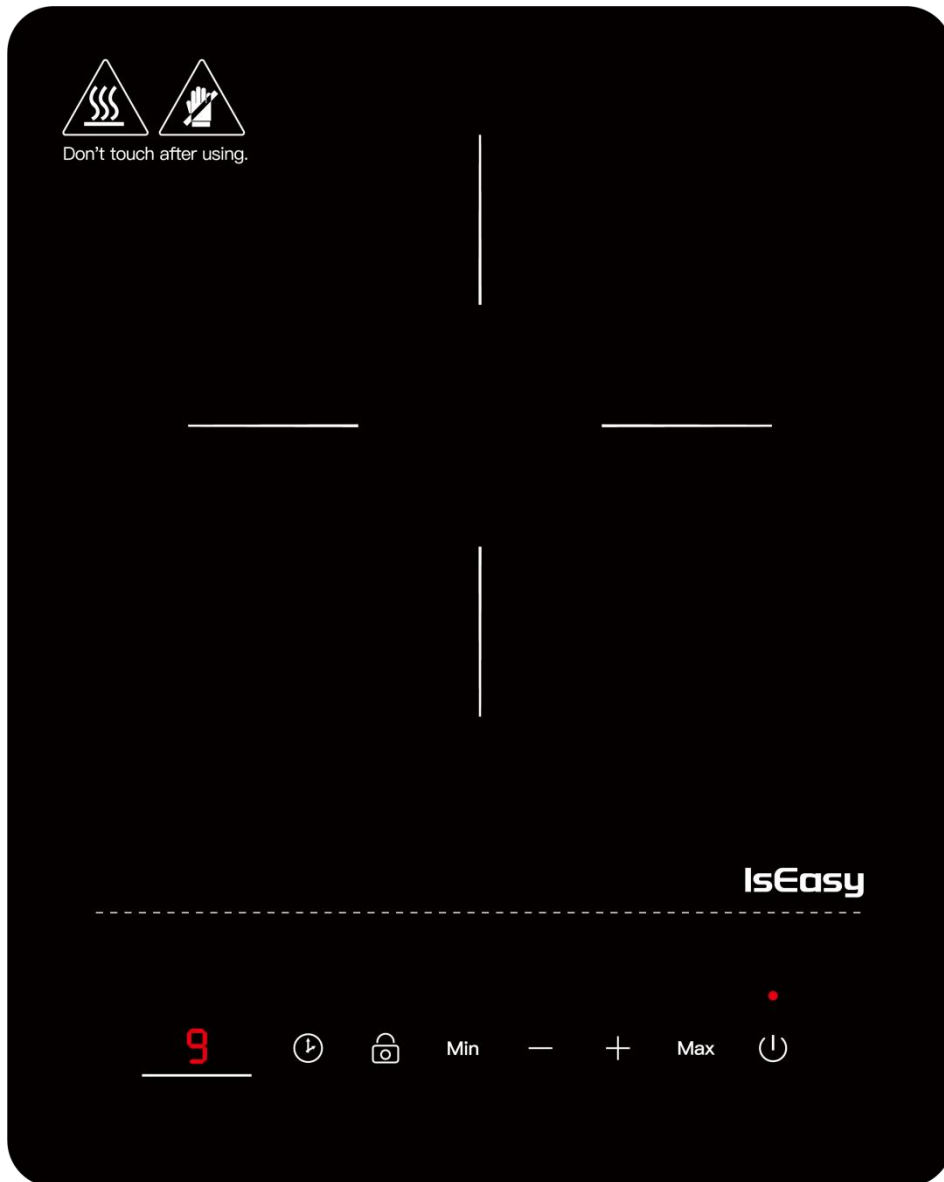

Instruction Manual

Specification:

Dimensions: 350 x 280 x 52mm

Voltage: 220-240V~ 50/60Hz

Power: 2100W

**UK
CA**

CONTENTS

SAFTY INSTRUCTIONS.....	
INSTALLATION.....	
ELECTRICAL CONNECTION.....	
BEFORE USE.....	
INSTRUCTION FOR USE.....	
TECHNICAL INFORMATION.....	
CLEANING.....	
TROUBLESHOOTING GUIDE.....	
NOISES MADE BY THE HOB.....	
AFTER-SALES SERVICE.....	

SAFETY INSTRUCTIONS

YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT

This manual and the appliance itself provide important safety messages, to be read and always observed.



This is the warning / caution-safety symbol, regarding safety, warning of potential risks to users and other

All messages relevant to safety specify the potential risk to which they refer and indicate how to reduce the risk of injury, damage and electric shocks due to incorrect use of the appliance. Make sure to comply with the following:

- Do not use multi-sockets or extension cords.
- Do not pull the appliance's power cable.
-
- The appliance is designed solely for domestic use for cooking food. No other use is permitted (e.g. heating rooms). The Manufacturer declines any liability for inappropriate use or incorrect setting of the controls.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years old shall be kept away unless continuously supervised.
- The accessible parts can become very hot during use. Children must be kept away from the appliance and watched over to ensure they do not play with it.
- Do not touch the appliance heating elements during and after use. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled sufficiently.
- Do not place flammable materials on or near the appliance.
- Overheated oils and fats catch fire easily. Pay attention when cooking food products rich in fat and oil.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- An air switch or circuit breaker (not supplied) should be installed in the compartment under the appliance.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- Do not use steam cleaners.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- After use, switch off the hob element by its control and do not rely on the pan detector.

IMPORTANT SAFETY GUARDS!

The appliance is intended for indoor use only.



- The surfaces are liable to get hot during use.

This appliance can be used by children aged from 8 years and above and persons with

reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

BEFORE USE

IMPORTANT: The cooking zones will not switch on if pots are not the right size. Only use pots bearing the symbol “INDUCTION SYSTEM” (Figure below). Place the pot on the required cooking zone before switching the hob on.



EXISTING POTS AND PANS

Use a magnet to check if the pot is suitable for the induction hob: pots and pans are unsuitable if not magnetically detectable.

- Make sure pots have a smooth bottom, otherwise they could scratch the hob. Check dishes.
- Never place hot pots or pans on the surface of the hob's control panel. This could result in damage.



- The bottom diameter of pots or pans should be at least 10cm.

INSTRUCTION FOR USE

GENERAL OVERVIEW



To avoid permanently damaging the glass-ceramic top, do not use:

- Pots with bottoms that are not perfectly flat.
- Metal pots with enameled bottom.

CONTROL PANEL LAYOUT




Switching the hob On/Off



To switch the hob on, press the  button and the cooking zone displays light up.

Switching on and adjusting cooking level

Once the hob is switched on and the pan is positioned on the chosen cooking zone, corresponding button: the display shows level 5. Cooking zone has various power levels, adjust the power level by selecting the




button “-”, “+”

.User can adjust power from 1-9. means 120W,300W,600W,900W,1200W,1400W,1600W,1800W,2100W. Min is “1”for 120W,MAX is “9” for 2100W.

Child lock



This function locks the controls to prevent accidental switching on of the hob.

To activate the child lock function, switch on the hob and hold button  for two seconds; Then the control panel is locked.

 
To deactivate the control panel lock, repeat the activation procedure,hold button for two seconds.

Timer



The timer can be used to set cooking time for a maximum of 480 minutes.

Press the button with the clock symbol, set the time by selecting the button “-”, “+” . Press “-”, “+” for 1minute, long time press “-”, “+” for 10 minutes.



When press it after three seconds, the timer begins the countdown. Once the set time has elapsed, ten acoustic signal sounds and the hob switch off automatically. To deactivate the timer, touch again button 3 seconds the clock symbol.

Auto switch off

The hob will automatically switch off after 2hours, when you did not set cooking time, forgot to switch off the hob, and did not operate the hob.

Pot choosing

- If you are using a pot that is not stainless steel, not correctly positioned or not of the correct dimensions for your induction hob, the light shows with E0 flashes 5 times, the hob switches off. When using a correct pot, 2 seconds work normally.

TECHNICAL INFORMATION

- Voltage: 220 - 240V 50/60 Hz
- Model: WQ-8030
- Power: 2100W

CLEANING



- Do not use steam cleaners.
- Before cleaning, make sure the cooking zones are switched off and the hot surface has cooled.

IMPORTANT: Do not use abrasive sponges or scouring pads. Their use could eventually ruin the glass.

- After each use, clean the hob (when it is cool) to remove any deposits and stains due to food residuals.
- Sugar or foods with a high sugar content damage the hob and must be immediately removed.
- Salt, sugar and sand could scratch the glass surface.
- Use a soft cloth, absorbent kitchen paper or a specific hob cleaner (follow the Manufacturer's instructions).
-

TROUBLESHOOTING GUIDE

- Read and follow the instructions given in the section "Instructions for use".
- Check that the electricity supply has not been shut off.
- Dry the hob thoroughly after cleaning it.
- If, when the hob is switched on, alphanumeric codes appear on the display, consult the following table for instructions.
- If the hob cannot be switched off after using it, disconnect it from the power supply.

Error code	Possible Cause	Remedy
E0	Use wrong pot	Change a fit size stainless steel pot
E1	Low voltage	Call the after-sales service and specify the error code
E2	High voltage	Call the after-sales service and specify the error code
E3	IGBT thermistor short or open	Call the after-sales service and specify the error code
E4	Surface thermistor short or open	Call the after-sales service and specify the error code
E5	High temperature Surface	Cut off electric cool it down
E6	High temperature IGBT	Call the after-sales service and specify the error code
E7	Display error	Restart it or call the after-sales

NOISES MADE BY THE HOB

- Induction hobs can make whistling or crackling sounds during normal operation, these actually come from the pots and pans as a result of the characteristics of the bottoms (for example, bottoms made of several layers of material, or uneven bottoms).
- These noises vary depending on the pots and pans used and the amount of food they contain, and are not indicative of a defect of any kind.
- In addition, the induction hob is equipped with an internal cooling system to control the temperature of electronic parts; as a result, during operation and for several minutes after the hob has been switched off, the noise of the cooling fan will be audible.
- This is perfectly normal and indeed essential for proper functioning of the appliance.

AFTER-SALES SERVICE

Before contacting the After-sales Service:

1. See if you can solve the problem yourself with the help of the “Troubleshooting guide”.
2. Switch the appliance off and then on again to see if the problem has been eliminated.

If the problem persists after the above checks, contact the nearest After-Sales Service.

Always specify:

- a brief description of the fault
- the product type and exact model
- your full address
- your telephone number

If any repairs are required, contact an authorized After-Sales Service Centre (to ensure the use of original spare parts and correct repairs). Spare parts are available.

Energy saving:

For optimum results, it is advisable to:

- Use pots and pans with bottom width equal to that of the cooking zone.
- Only use flat-bottomed pots and pans.
- When possible, keep pot lids on during cooking.
- Use a pressure cooker to save even more energy and time.
- Place the pot in the middle of the cooking zone marked on the hob.

Information on the disposal for Waste Electrical & Electronic Equipment

(WEEE) This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal for treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product. Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your

nearest collection point for WEEE.



Import agent: **GUANGDONG WECHGOOD ELECTRONICAL APPLIANCES TECHNOLOGY CO.,LTD**

Address: 5th Floor, Building No. 12, Phase one of Tianfulai International Zone, No.39 Changbao West Road, Rongui Street, Shunde District, Foshan City, Guangdong, China



SEA&MEW ACCOUNTING LTD

Address: Electric Avenue Vision 25, London, Enfield EN3 7GD

Contact Person: Billy Han

E-mail: info@seamew.net

Tel: +447399648608

**UK
CA**



E-Mail: service@iseasy.com

Website: www.iseasy.com